

MEASURING TUTORIAL

American Window Industries, Inc. © (2006) v. 1



*“Reducing energy cost
one window at a time”*



866-439-4294

Use this tutorial as a guide for measuring your windows.
Should you have further questions call us at 1-800-998-4294

FIRST STEP

Get some of our Suggested Measuring Items:

A Metal tape measure, a pencil or pen and something for writing support. To assist you, we have a Printable Measure Worksheet at the end of this tutorial. Your measurements are for pricing purposes only and are not used for ordering your new custom made windows. All measurements are checked, on site, by your installing contractor at the pre installation conference.

SECOND STEP

Each window has a different way of measuring. Please check all the different types:

- a. Standard Window Styles
- b. Bay and Bow Windows
- c. Garden Windows
- d. Special Shape Windows
- e. Patio Windows

STANDARD WINDOW SYLES:




Window measurements required: Separate width and height measurements in round inches. Measure from side to side for width and top to bottom for height. (See illustration)

It is possible to replace two vertical windows with one horizontal slider. (See illustration)

Note: Tempered glass is a required by most Building Departments and should be added as an option on windows that are within 18 inches from the floor, at a stairway landing, in a bathroom tub/shower stall, or entry door side lites.

Your measurements are for pricing purposes only and are not used for ordering your custom made windows. All measurements are checked by the installing contractor at your pre installation conference.

BAY BOW WINDOWS:

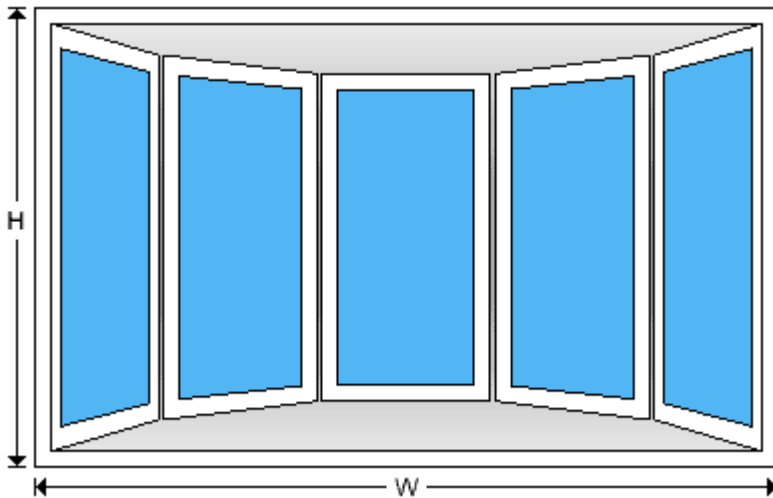


Window measurements needed: Separate width and height measurements in inches, rounded up to the next inch. Measure from side to side for width and top to bottom for height. (See illustration)

Note 1: Bays and bows come standard with all fixed sections. End openers must be selected as an option.

Note 2: If the overhang is more than 12" above the window, a roof kit may be required.

GARDEN WINDOWS:

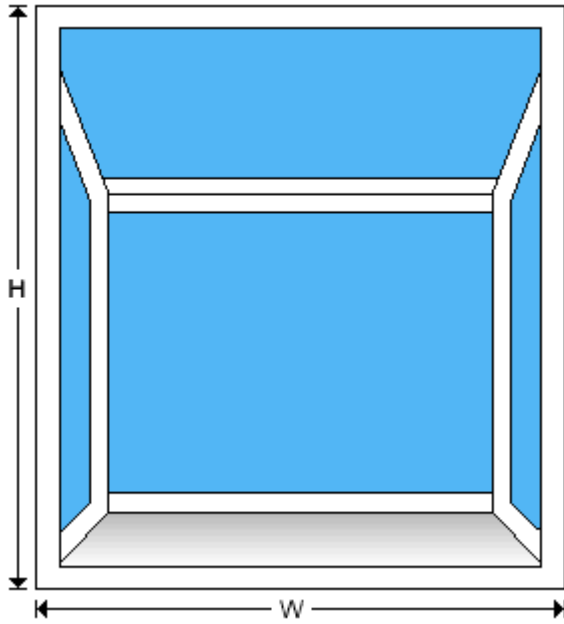

Window measurements needed: Separate width and height measurements in inches, rounded up to the next inch. Measure from side to side for width and top to bottom for height. (See illustration)

PATIO DOORS:



Patio Door measurements require only the width of the door frame in feet (See illustration).

Most 2-lite doors are either 5 , 6 or 8 feet wide.

Standard height is 79.5 inches.

MEASURING WORKSHEET

Print this page and use it to enter your window data, including any options.

	Room Location	Window Style	Width (W)	Height (H)	Option 1	Option 2	Option 3
1							
2							
3							
4							
5							
6							
7							
8							
9							
10							
11							
12							

13							
14							
15							
16							
17							
18							
19							
20							
21							
22							
23							
24							
25							